



e25HD Multimedia Speaker

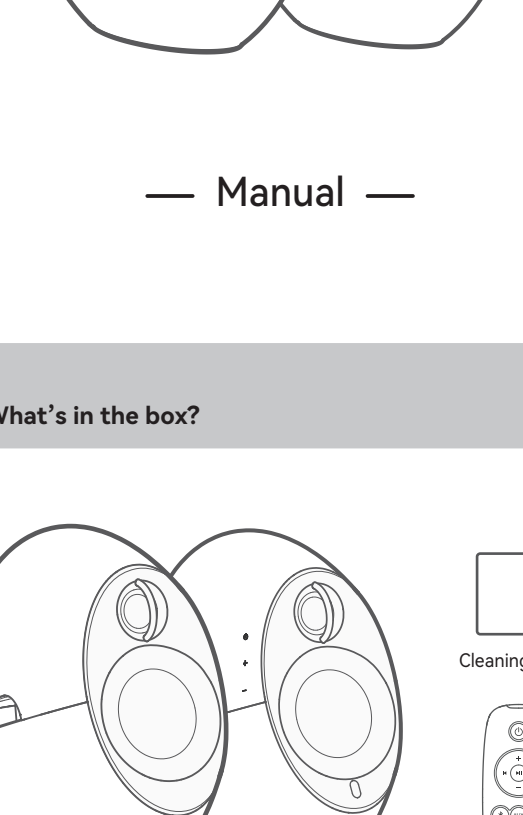

— Manual —

EN

1. What's in the box?

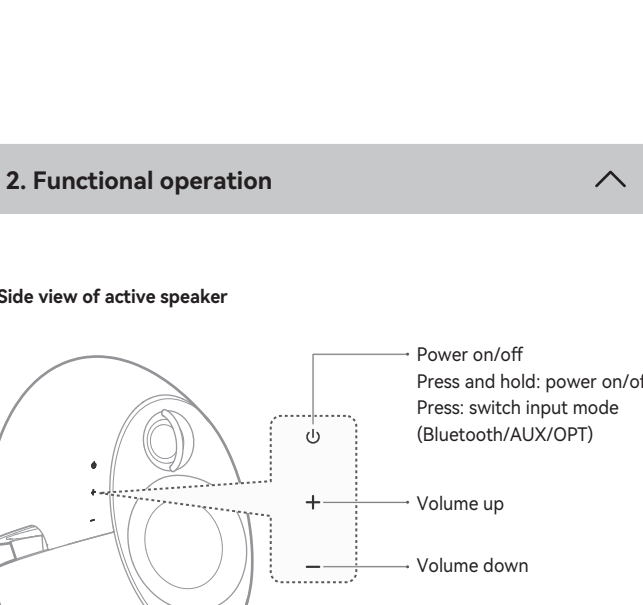


Note:

- Images are for illustrative purposes only and may differ from the actual product.
- For the need of technical improvement and system upgrade, information and specifications contained herein may be slightly different from actual product. If any difference is found, the actual product prevails.

2. Functional operation


● Side view of active speaker

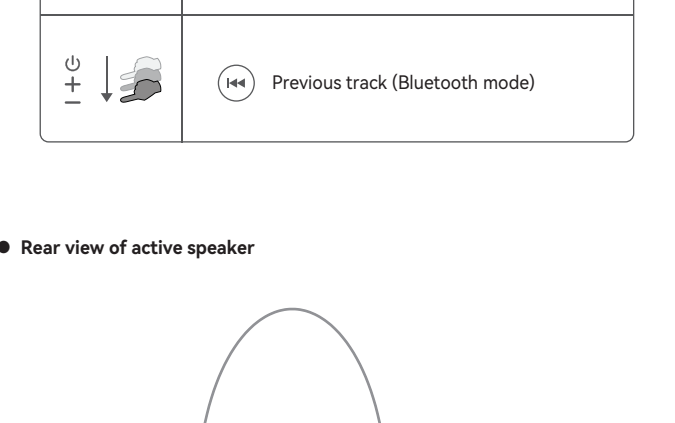


Control

	Play/pause (Bluetooth mode) Mute/mute off (AUX/OPT mode)
	Disconnect Bluetooth
	Next track (Bluetooth mode)
	Previous track (Bluetooth mode)


● Rear view of active speaker

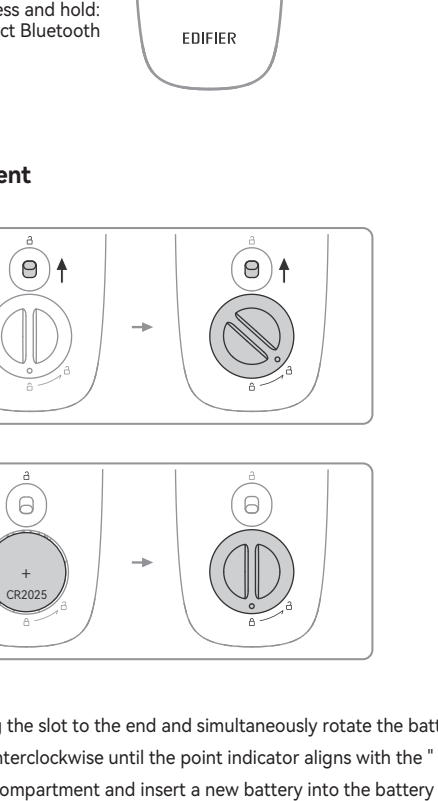


● Rear view of passive speaker

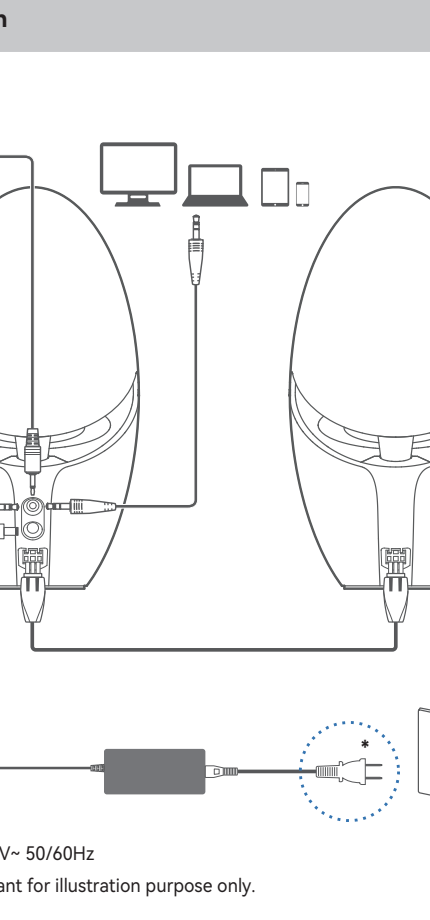

3. Remote control

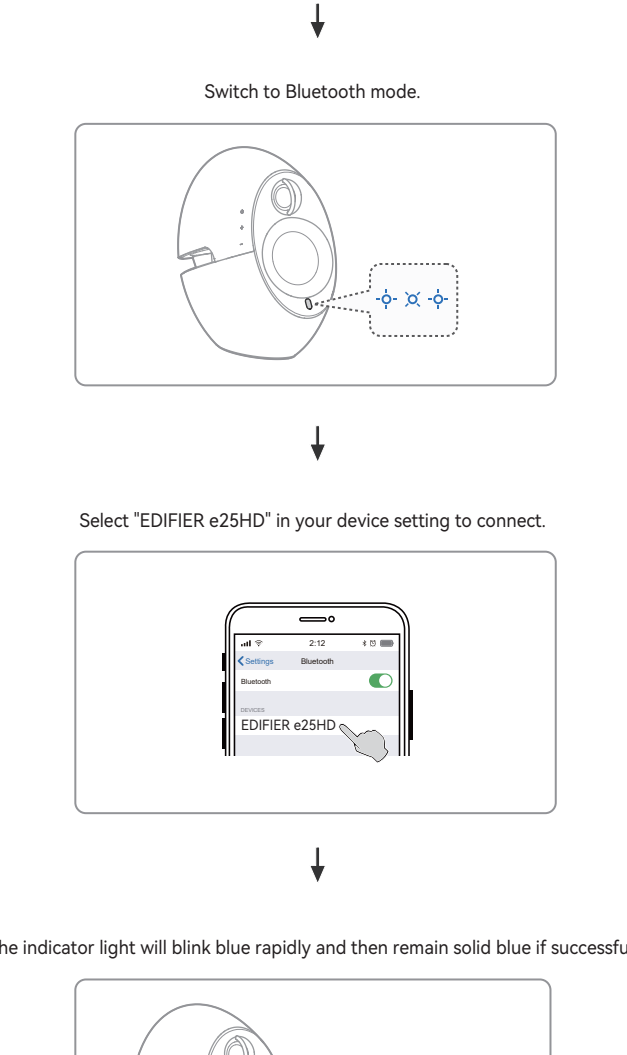


Battery replacement

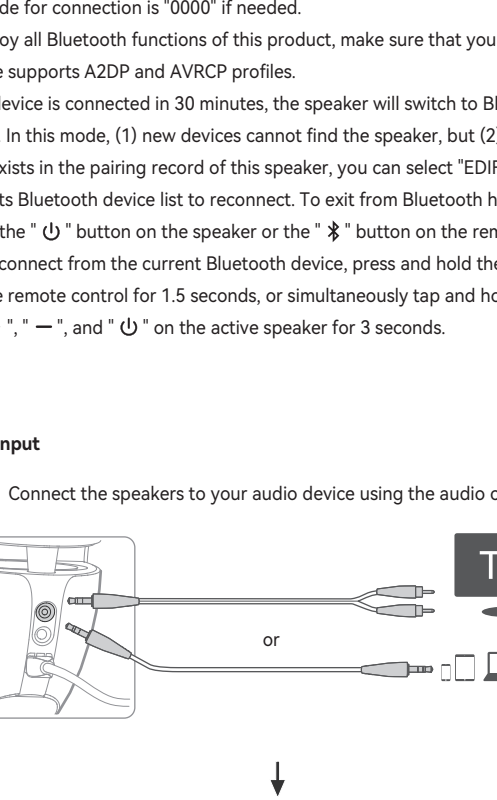

1. Slide the switch along the slot to the end and simultaneously rotate the battery compartment lid counterclockwise until the point indicator aligns with the "B" icon.
2. Remove the battery compartment and insert a new battery into the battery compartment with its positive electrode outwards.
3. Put back the battery compartment lid and rotate it clockwise until the point indicator aligns with the "B" icon.

4. Connection

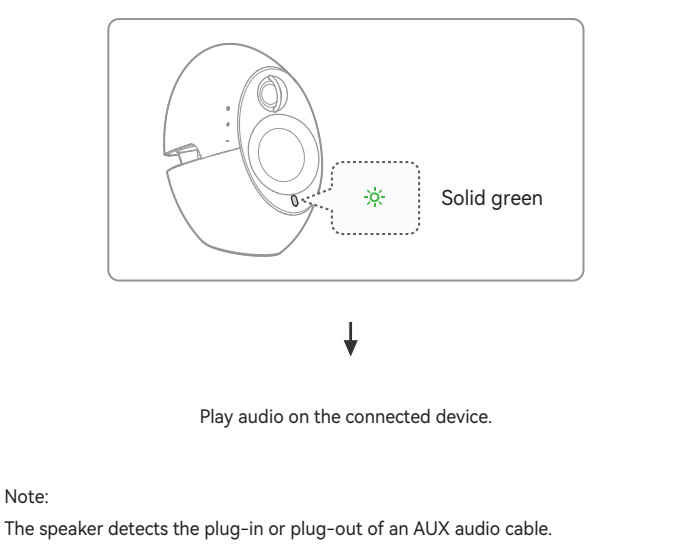


Power input: 100-240V~ 50/60Hz

* This plug type is meant for illustration purpose only.


5. Operating instructions

● Bluetooth input


Press the "P" button on the active speaker or the "B" button on the remote control.

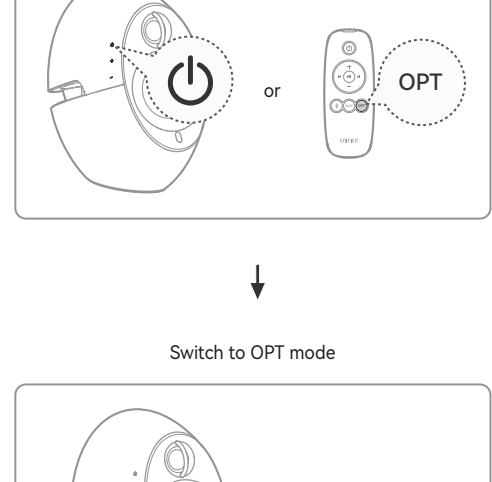

Switch to Bluetooth mode.

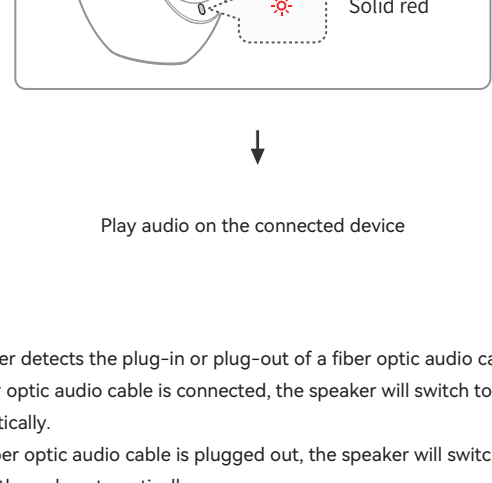

The indicator light will blink blue rapidly and then remain solid blue if successful.

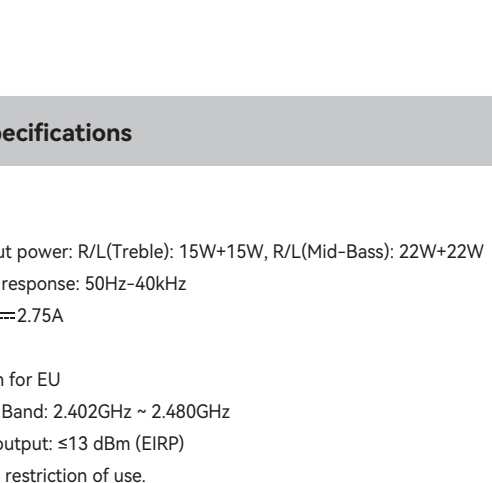


Note:

- Pin code for connection is "0000" if needed.
- To enjoy all Bluetooth functions of this product, make sure that your audio source device supports A2DP and AVRCP profiles.
- If no device is connected in 30 minutes, the speaker will switch to Bluetooth hidden mode. In this mode, (1) new devices cannot find the speaker, but (2) for a device that exists in the pairing record of this speaker, you can select "EDIFIER e25HD" from its Bluetooth device list to reconnect. To exit from Bluetooth hidden mode, press the "P" button on the speaker or the "B" button on the remote control.
- To disconnect from the current Bluetooth device, press and hold the "B" button on the remote control for 1.5 seconds, or simultaneously tap and hold the buttons of "+", "-", and "P" on the active speaker for 3 seconds.

● AUX input

Connect the speakers to your audio device using the audio cable.

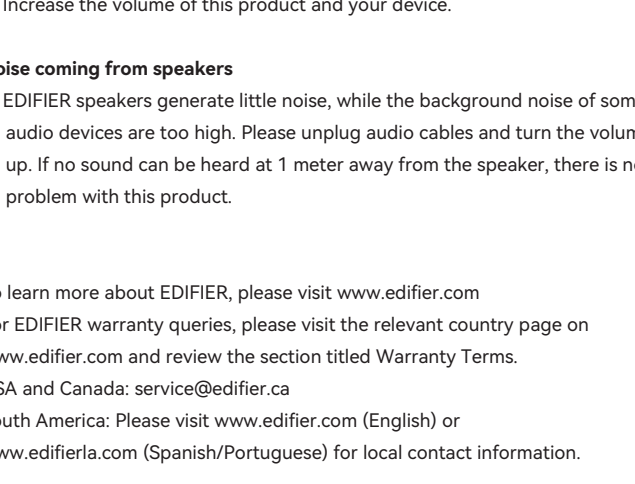

Switch to AUX mode.

Note:

- The speaker detects the plug-in or plug-out of an AUX audio cable.
- If an AUX audio cable is connected, the speaker will switch to AUX mode automatically.
- If the AUX audio cable is plugged out, the speaker will switch to Bluetooth mode automatically.

● OPT input

Connect the speakers to your audio device using the fiber optic audio cable.

Switch to OPT mode

Note:

- The speaker detects the plug-in or plug-out of a fiber optic audio cable.
- If a fiber optic audio cable is connected, the speaker will switch to OPT mode automatically.
- If the fiber optic audio cable is plugged out, the speaker will switch to Bluetooth mode automatically.

6. Specifications

Total output power: R/L(Treble): 15W+15W, R/L(Mid-Bass): 22W+22W

Frequency response: 50Hz-40kHz

Input: 20V $\pm$ 2.75A

Declaration for EU

Frequency Band: 2.402GHz ~ 2.480GHz

RF Power output: $\leq$ 13 dBm (EIRP)

There is no restriction of use.

7. Troubleshooting

Cannot connect to your Bluetooth device

- Make sure that the distance between this product and your Bluetooth device is less than 10 meters and there are no obstacles between them.
- Make sure that no device is connected to this product via Bluetooth.
- Make sure that this product is in Bluetooth pairing mode. If not, manually switch it to this mode.
- Restart this product, enable Bluetooth function on your Bluetooth device, and then try again.
- Reset this product to factory settings and try again.

No power

- Make sure that the power cable is properly connected.
- Make sure that the power supply is not disconnected.

No sound

- Make sure that this product and your device is properly connected.
- Make sure that the correct audio input source is selected.
- Make sure that the playback is not paused.
- Make sure that this product and your device are not muted.
- Increase the volume of this product and your device.

Noise coming from speakers

- EDIFIER speakers generate little noise, while the background noise of some audio devices are too high. Please unplug audio cables and turn the volume up. If no sound can be heard at 1 meter away from the speaker, there is no problem with this product.

To learn more about EDIFIER, please visit www.edifier.com

For EDIFIER warranty queries, please visit the relevant country page on www.edifier.com and review the section titled Warranty Terms.

USA and Canada: service@edifier.ca

South America: Please visit www.edifier.com (English) or

www.edifierla.com (Spanish/Portuguese) for local contact information.