

For more information, please visit our website:
www.edifier.com



@Edifierglobal



@Edifier_Global



@Edifier_Global

EU Declaration of Conformity can be found in: <https://www.edifier.com/int/eu-doc.html>

Edifier International Limited
P.O. Box 6264
General Post Office
Hong Kong

Tel: +852 2522 6989
Fax: +852 2522 1989
www.edifier.com
© 2022 Edifier International Limited. All rights reserved.
Printed in China

NOTICE:
For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.
Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

User manual | Manuel d'utilisateur | Manual de usuario | Bedienungsanleitung | Manuale dell'utente | Manual do utilizador

Important safety instruction

1. Please read the instructions carefully. Keep it in safe place for future reference.
2. Use only accessories approved by the manufacturer.
3. Install the instrument properly by following the instructions in the device connection section.
4. Using the product in a 0-35 °C environment is recommended. Shipping and storing the product in a 0-35°C environment is recommended.
5. To reduce the risk of fire and electric shock, do not expose the product to rain or moisture.
6. Do not use this product near water. Do not immerse the product into any liquid or have it exposed to dripping or splashing.
7. Do not install or use this product near any heat source (e.g. radiator, heater, stove, or other devices that generate heat).
8. Do not place any object filled with liquids, such as vases on the product, neither should any open fire, such as lighted candles be placed on the product.
9. Do not block any ventilation openings. Do not insert any object into ventilation openings or slots. It may cause fire or electric shock.
10. Keep sufficient clearance around the product to maintain good ventilation (minimum 5cm is recommended).
11. Do not force a plug into the jack. Before connection, check for blockage in the jack and whether the plug matches the jack and is oriented to the right direction.
12. Keep the provided accessories and parts (such as screws) away from children to prevent from being swallowed by mistake.
13. Do not open or remove the housing yourself. It may expose you to dangerous voltage or other hazardous risks. Regardless the cause of damage (such as damaged wire or plug, exposure to liquid splash or foreign object falling in, exposure to rain or moisture, product not working or being dropped, etc.), the repair has to be performed by an authorized service professional immediately.
14. Before cleaning the product with dry cloth, always turn off the product and disconnect the power plug first.
15. Never use strong acid, alkali, gasoline, alcohol, or other chemical solvents to clean the product surface. Use only neutral solvent or clear water for cleaning.
16. The product must be used at an altitude of lower than 2000m.

 Excessively loud music may lead to hearing loss. Please keep the volume in a safe range.

 Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

1
English

Important safety instruction

- Power warning:**
1. Place the product near the power outlet for easy use.
 2. Before use, make sure that the operating voltage is the same as your local power supply. Correct operating voltage can be found on the product plate.
 3. For safety purpose, unplug the product during lightning storms or when unused for extended periods of time.
 4. Under normal conditions, the power supply may get hot. Please keep good ventilation in the area and exercise caution.
 5. Safety warning labels on the housing or bottom of the product or power adaptor.



This symbol is to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is to warn the user not to disassemble the enclosure of the product and there is no user-replaceable part inside. Take the product to an authorized service center for repair.



This symbol indicates that the product is for indoor use only.



This symbol indicates that the product is a CLASS II or double insulated electrical device with no earth requirement.

The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

2
English

Box Contents

Box contents:


- 1 x Active speaker
- 1 x Passive speaker
- 1 x Speaker connecting cable
- 1 x 3.5 mm to dual RCA audio connecting cable
- 1 x Dual RCA to dual RCA audio cable
- 1 x User Manual



Note: Images are for illustrative purposes only and may differ from the actual product.

3
English


Illustrations

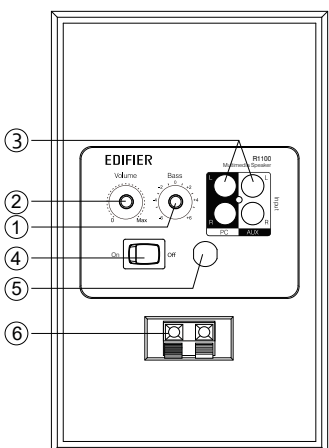

1. Bass adjustment
2. Master volume control
3. Line-in
4. Power switch
5. Power cord
6. Wire clip

4
English

Connectivity

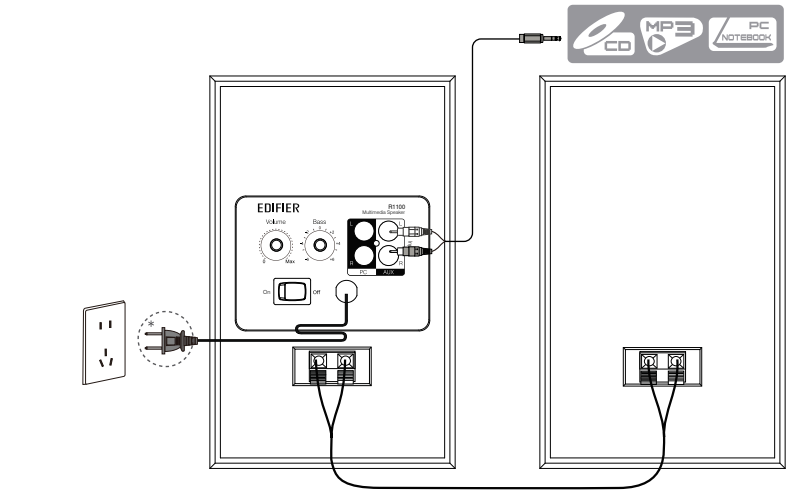

* This plug type is meant for illustration purpose only.

5
English

Specifications

Power output:	RMS 21W × 2 (DRC ON)
Signal to noise ratio:	≥85dBA
Distortion:	≤0.5%
Input sensitivity:	PC: 700mV ± 50mV AUX: 550mV ± 50mV
Frequency response:	65Hz ~ 20KHz (+/-6dB)
Bass unit:	4 inch (116mm)
Tweeter unit:	Φ 13mm silk dome tweeter

6
English

Troubleshooting

- Please check if power is connected, and if the wall outlet is switched on.
- Please switch the system off then on and reconnect to the audio source.
- Please check if the master volume is turned to minimum.
- Please check if the audio input cable is connected correctly.
- Please check if there is signal from audio source.

If you have any further questions or concerns regarding EDIFIER Products...

China:
Please visit our website at: www.edifier.com, or email EDIFIER Support for further assistance at: main@edifier.com,

Asia Pacific, Europe, Middle East and Africa:

Please visit our website at: www.edifier-international.com or email EDIFIER Support for further assistance at: enquiry@edifier.com,

→ Dear Customer, thank you for purchasing this EDIFIER product. For the EDIFIER warranty applicable for this product, we refer you to the EDIFIER website www.edifier-international.com/warranty-terms.

Canada/USA/Mexico: www.edifier.ca, Email: service@edifier.ca

Please visit our website at: www.edifier.ca or email EDIFIER Support at: service@edifier.ca

If you prefer, you may contact us by phone, Toll Free: 1-877-EDIFIER (334-3437) in Canada, 1-800-688-7406 in USA.

South America: Please visit www.edifier.com (English) or www.edifierla.com (Spanish/Portuguese) for detailed local contact information.

7
English