 


QR65
Multimedia Speaker

— Manual —

EN

1. EDIFIER ConneX app

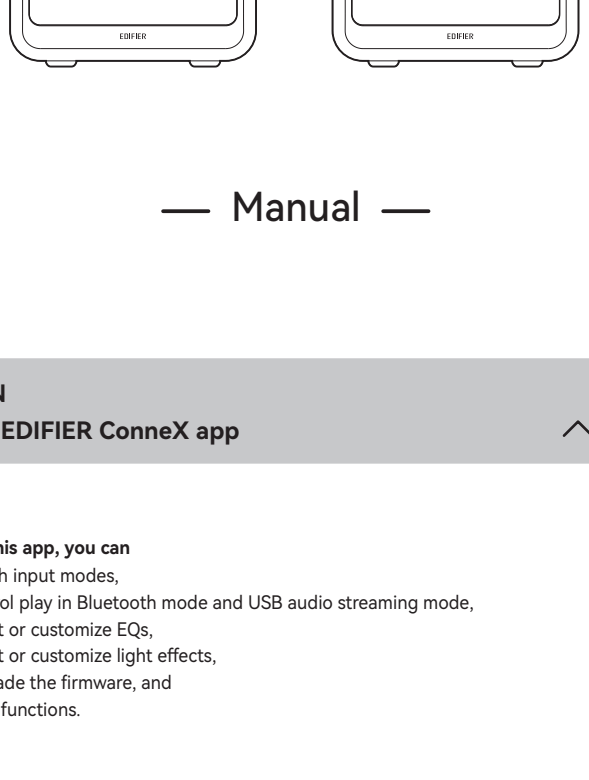

With this app, you can

- Switch input modes,
- Control play in Bluetooth mode and USB audio streaming mode,
- Select or customize EQs,
- Select or customize light effects,
- Upgrade the firmware, and
- More functions.

2. What's in the Box?




Note:

- Images are for illustrative purposes only and may differ from the actual product.
- The bundled USB connecting cable is for audio streaming only. Do not use it for device charging.
- For the need of technical improvement and system upgrade, information and specifications contained herein may be slightly different from actual product. If any difference is found, the actual product prevails.


3. Product overview



 
• Rear view of active speaker

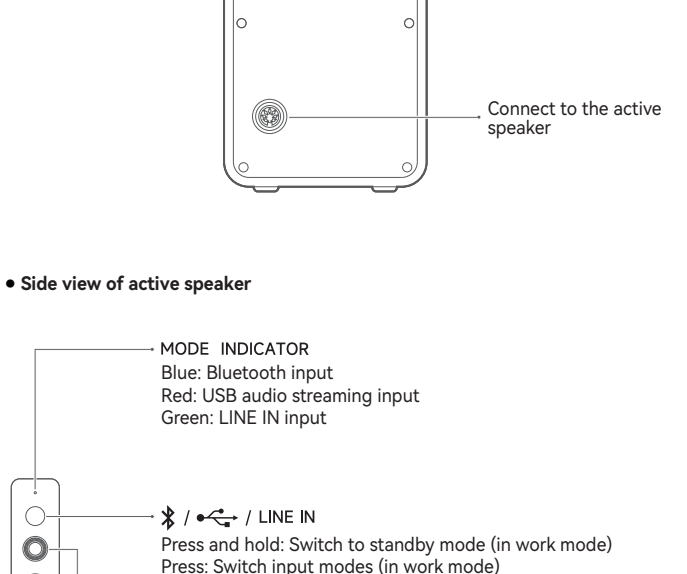

• Rear view of passive speaker

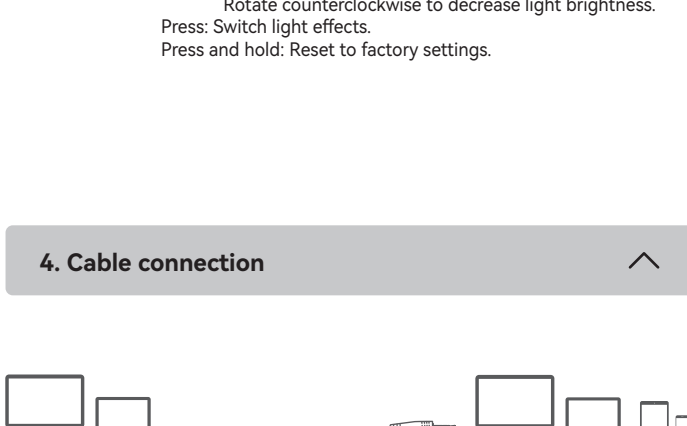 

• Side view of active speaker

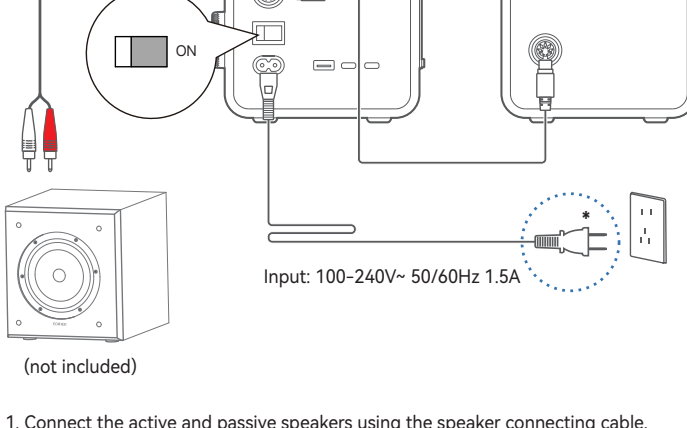 


MODE INDICATOR
Blue: Bluetooth
Red: USB audio streaming input
Green: LINE IN input

VOLUME
Rotate: Rotate clockwise to increase volume.
Rotate counterclockwise to decrease volume.
In LINE IN mode, rotate to unmute the speaker.
Press: Play/pause (in USB audio streaming or Bluetooth mode)
Mute/unmute the speaker (in LINE IN mode)
Press and hold: Disconnect Bluetooth (in Bluetooth mode)
Switch to Bluetooth pairing mode (in Bluetooth hidden mode)

LIGHT EFFECTS
Rotate: Rotate clockwise to increase light brightness.
Rotate counterclockwise to decrease light brightness.
Press: Switch light effects.
Press and hold: Reset to factory settings.

4. Cable connection

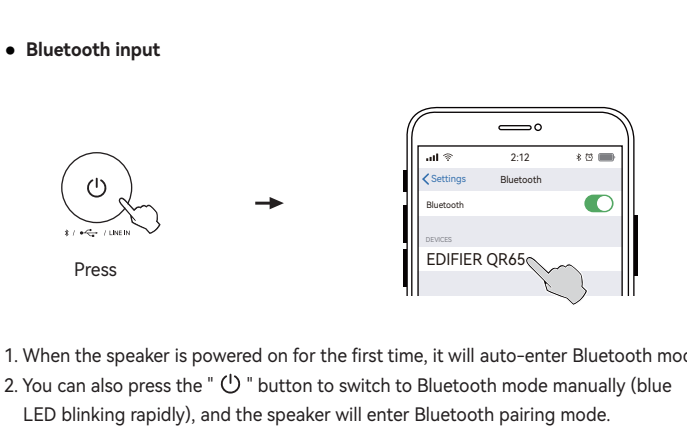

1. Connect the active and passive speakers using the speaker connecting cable.
2. Connect your device and the active speaker properly. To connect it with a subwoofer, another suitable audio cable may be required.
3. Connect to a power source using the power cable, and then turn on the power switch.

* This plug type is meant for illustration purpose only.

5. Power on/off



 
Power on: Switch the main power button on the rear panel of the active speaker to "ON".

Power off: Switch the main power button to "OFF".

6. Audio inputs



• Bluetooth input

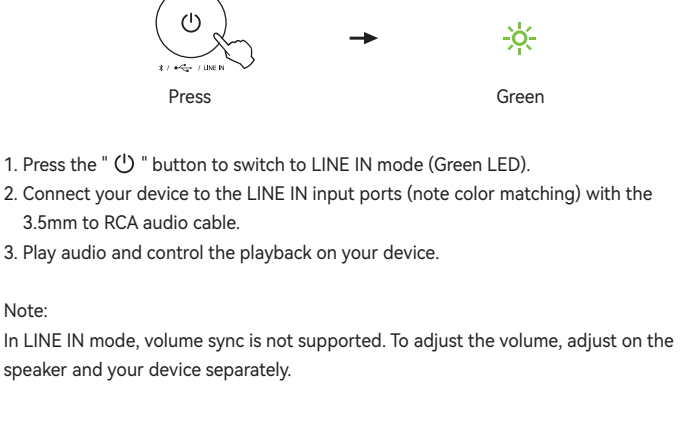


1. When the speaker is powered on for the first time, it will auto-enter Bluetooth mode.
2. You can also press the " " button to switch to Bluetooth mode manually (blue LED blinking rapidly), and the speaker will enter Bluetooth pairing mode.
3. Select "EDIFIER QR65" in your device setting to connect, and the blue LED will be steady lit when the connection is established.

- To disconnect from the current Bluetooth device, press and hold the " VOLUME " button for 1.5 seconds.

Note:

1. Pin code for connection is "0000" if needed.
2. To enjoy all Bluetooth functions of this product, make sure that your audio source device supports A2DP and AVRCP profiles.
3. If no device is connected in 30 minutes, the speaker will switch to Bluetooth hidden mode. In this mode, (1) new devices cannot find the speaker, but (2) for a device that exists in the pairing record of this speaker, you can select "EDIFIER QR65" from its Bluetooth device list to reconnect. To exit from Bluetooth hidden mode, press and hold the " VOLUME " button for 1.5 seconds.

 • USB audio streaming input

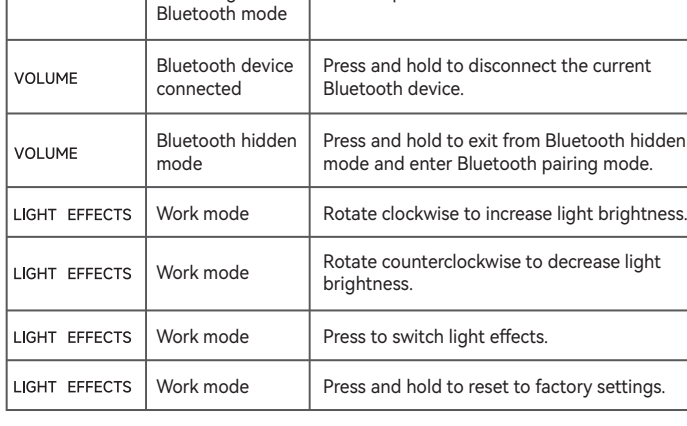


1. Press the " " button to switch to USB audio streaming mode (Red LED).
2. Connect the speaker to your computer with the bundled USB connecting cable.
3. On the computer, open the sound settings and select "EDIFIER QR65" as its output device.

Note:

1. In USB audio streaming mode, volume sync is not supported. To adjust the volume, adjust on the speaker and your computer separately.
2. The following operating systems support USB audio streaming: Windows 11, Windows 10, Windows 8, and Windows 7.

 • LINE IN input

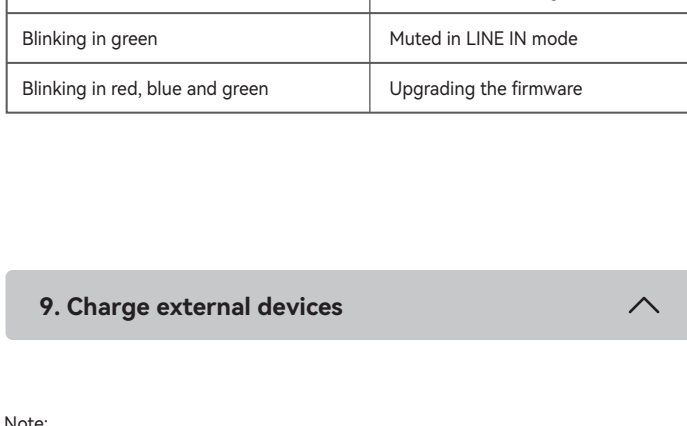

1. Press the " " button to switch to LINE IN mode (Green LED).
2. Connect your device to the LINE IN input ports (note color matching) with the 3.5mm to RCA audio cable.
3. Play audio and control the playback on your device.

Note:

In LINE IN mode, volume sync is not supported. To adjust the volume, adjust on the speaker and your device separately.

7. Control



Button / Knob	Mode	Action
/ / LINE IN	Work mode	Press and hold to switch to standby mode.
/ / LINE IN	Standby mode	Press to switch to work mode.
/ / LINE IN	Work mode	Press to switch input modes.
VOLUME	Work mode	Rotate clockwise to increase volume.
VOLUME	Work mode	Rotate counterclockwise to decrease volume.
VOLUME	LINE IN mode	Press to mute or unmute the speaker.
VOLUME	LINE IN mode	Rotate to unmute the speaker.
VOLUME	USB audio streaming or Bluetooth mode	Press to pause or resume the current track.
VOLUME	Bluetooth device connected	Press and hold to disconnect the current Bluetooth device.
VOLUME	Bluetooth hidden mode	Press and hold to exit from Bluetooth hidden mode and enter Bluetooth pairing mode.
LIGHT EFFECTS	Work mode	Rotate clockwise to increase light brightness.
LIGHT EFFECTS	Work mode	Rotate counterclockwise to decrease light brightness.
LIGHT EFFECTS	Work mode	Press to switch light effects.
LIGHT EFFECTS	Work mode	Press and hold to reset to factory settings.

8. Indicator status



Indicator status	Speaker status
Blinking in blue per 0.2s	Bluetooth pairing mode
Blinking in blue per 0.5s	Bluetooth hidden mode
Solid blue	Bluetooth device connected
Solid green	LINE IN mode
Solid red	USB audio streaming mode
Blinking in green	Muted in LINE IN mode
Blinking in red, blue and green	Upgrading the firmware

 
9. Charge external devices



Note:

- Power input: 100~240V~ 50/60Hz 1.5A
- During charging, make sure that the power cable is properly connected and the main power button on the rear panel of the active speaker is switched to "ON".
- To guarantee high-efficiency charging, use a charging cable that supports the charging current of 4.5A or higher.

Connect your device to the USB-A port, USB-C 1 port or USB-C 2 port on the rear panel of the active speaker for charging.

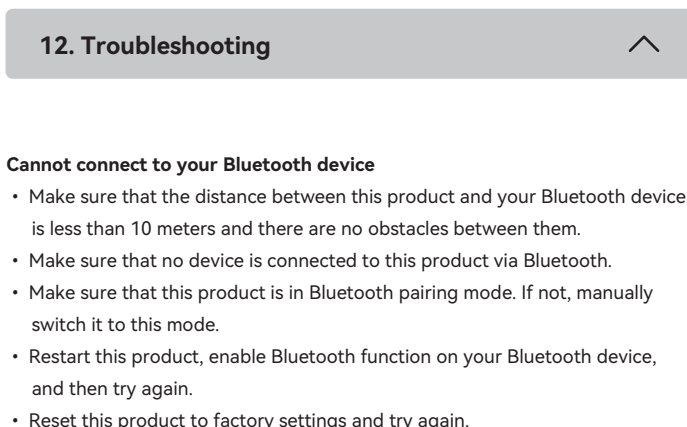

USB-A	5V≡3A, 9V≡3A, 12V≡3A, 20V≡3A (60W max.)
USB-C 1	5V≡3A, 9V≡3A, 12V≡3A, 15V≡3A, 20V≡3.25A (65W max.)
USB-C 2	5V≡3A, 9V≡3A, 12V≡3A, 15V≡3A, 20V≡3.25A (65W max.)
USB-C 1 and USB-C 2	20W max. + 45W max.
USB-A and USB-C 1	15W max.
USB-A and USB-C 2	20W max. + 45W max.
USB-A, USB-C 1 and USB-C 2	15W max. + 45W max.

10. Know more about this speaker



Get the latest firmware

Upgrade the firmware when a version update notice appears in your EDIFIER ConneX app. During upgrading, the LED on the side panel of the active speaker will blink in red, blue and green.

Note: Do not disconnect the power supply and Bluetooth connection during upgrading.

How to reset this speaker to factory settings?

In work mode, press and hold the " LIGHT EFFECTS " button for 5 seconds.

Note: After the speaker is reset, all settings and pairing records on the speaker will be cleared.

11. Specifications

Total output power: R/L(Treble): 15W+15W, R/L(Mid-Bass): 20W+20W

Charging output power: 65W max.

Frequency response: 55Hz~40kHz

Declaration for EU

Frequency Band: 2.402GHz ~ 2.480GHz

RF Power Output: ≤12 dBm (EIRP)

There is no restriction of use.

12. Troubleshooting

Cannot connect to your Bluetooth device

- Make sure that the distance between this product and your Bluetooth device is less than 10 meters and there are no obstacles between them.
- Make sure that no device is connected to this product via Bluetooth.
- Make sure that this product is in Bluetooth pairing mode. If not, manually switch it to this mode.

- Restart this product, enable Bluetooth function on your Bluetooth device, and then try again.
- Reset this product to factory settings and try again.

No power

- Make sure that the power cable is properly connected.
- Make sure that the power supply is not disconnected.
- Make sure that the main power button on the rear panel is switched to "ON".

No sound

- Make sure that this product is powered on.
- Make sure that this product and your device is properly connected.
- Make sure that the playback is not paused.
- Make sure that this product and your device are not muted.
- Increase the volume of this product and your device.

Noise coming from speakers

- EDIFIER speakers generate little noise, while the background noise of some audio devices are too high. Please unplug audio cables and turn the volume up. If no sound can be heard at 1 meter away from the speaker, there is no problem with this product.

To learn more about EDIFIER, please visit www.edifier.com

For EDIFIER warranty queries, please visit the relevant country page on www.edifier.com and review the section titled Warranty Terms.

USA and Canada: service@edifier.ca

South America: Please visit www.edifier.com (English) or

www.edifierla.com (Spanish/Portuguese) for local contact information.