

DREAME

Link Module User Manual

TABLE OF CONTENTS

1 Safety Instructions	P05
2 Installation	P05
3 Usage Notes	P10
4 Technical Data	P12

1 Safety Instructions


RF Exposure Requirements

To maintain compliance with the RF exposure requirement, a separation distance of 35 cm between the device and the human should be maintained.

2 Installation


⚠ Warning: please wear protective gloves before installation to prevent injuries.

1 Turn off the robot.

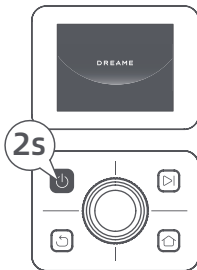


- 2 Place the robot on a soft surface and turn it upside down.


Note: Make sure the LiDAR protective cover is on the LiDAR.

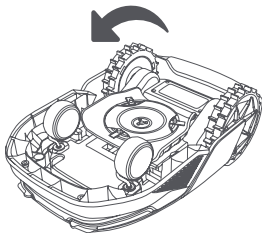


- 3 Loosen 4 screws to remove the cover using a screwdriver.

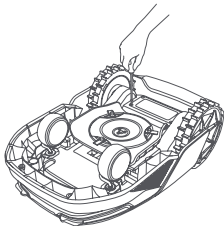


- 4 Take out the battery, and disconnect the battery connector.

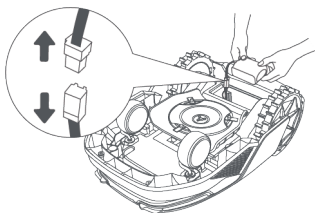


- 5 Connect Link Module to the module connector until you hear a click, and insert it into the slot with "Dreame" upward. Organize the module connection cable and ensure it is well placed.

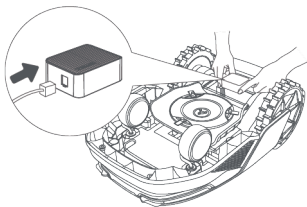


- 6** Connect battery to the battery connector, organize the cable and install the battery.

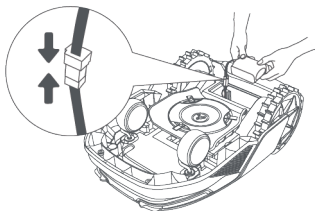

- 7** Fasten the cover with the screwdriver.

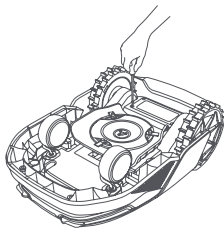

- 8 Replace the robot to its upright position.

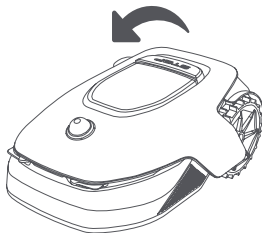

3 Usage Notes

- After installing the Link Module, power on your robot and the Link Service will activate automatically.  will light up on the robot's display and in the app, indicating that activation is successful. You can view the usage status of the Link Module and Link Service under "Connections" in the app.
- With the Link Service activated, you can remotely monitor your robot's status and initiate mowing tasks without a Wi-Fi connection. Additionally, the safety features and location services will become available through the app once the Link Service is activated.
- Link Service is offered free of charge for the first three years starting from the time of activation. To extend the service upon expiration, please contact the Dreame after-sales service team at **aftersales@dreame.tech**.

Warning: The Link Module is designed exclusively to be used with Dreame robotic lawnmowers. Any abnormal status detected in the Link Service may result in the suspension of your service. If this occurs, please contact the Dreame after-sales service team at **aftersales@dreame.tech** to help you restore the service.

Warning: If you do not contact Dreame after-sales service to renew the Link Service within one year after its expiry, your Link Module will be locked. To reactivate the service, you must bring the Link Module to a Dreame after-sales service center. Additional charges for repair and maintenance may apply for reactivation. Please pay attention to notifications in the app concerning this issue. To check the expiry date of your Link Service, go to Settings > Connections > Link Module in the app.

4 Technical data

Frequency bands	LTE-FDD: B1/3/7/8/20/28A LTE-TDD: B38/40/41 GNSS: GPS/GLONASS/BDS/Galileo/QZSS
-----------------	--

Countries/Regions covered: Albania, Andorra, Austria, Belgium, Bosnia and Herzegovina, Bulgaria, Croatia, Cyprus, Czech Rep, Denmark, Estonia, Finland, France, Germany, Greece, Guernesey, Hungary, Iceland, Ireland, Italy, Kosovo, Latvia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Malta, Moldova, Monaco, Montenegro, Netherlands, Norway, Poland, Portugal, Romania, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, UK, Ukraine.

Standards	Band	Uplink (MHz)	Downlink (MHz)	Max RF Output Power	GNSS	Frequency Band
LTE	1	1920 - 1980	2110 - 2170	23 ± 2	GPS/G LONAS S/BDS/ Galileo /QZSS	1559 -1592 MHz
	3	1710 - 1785	1805 - 1880	23 ± 2		
	7	2500 - 2570	2620 - 2690	23 ± 2		
	8	880 - 915	925 - 960	23 ± 2		
	20	832 - 862	791 - 821	23 ± 2		
	28	703 - 748	758 - 803	23 ± 2		
	38	2570 - 2620	2570 - 2620	23 ± 2		
	40	2300 - 2400	2300 - 2400	23 ± 2		
	41	2496 - 2690	2496 - 2690	23 ± 2		
GSM	3	1710 - 1785	1805 - 1880	30 ± 2		
	8	880 - 915	925 - 960	33 ± 2		
WCDMA	1	1920 - 1980	2110 - 2170	23 ± 2		
	8	880 - 915	925 - 960	23 ± 2		