




W800BT Pro

Wireless over-ear headphones with noise reduction functionality

Model: EDF200149




PACKAGE CONTENTS

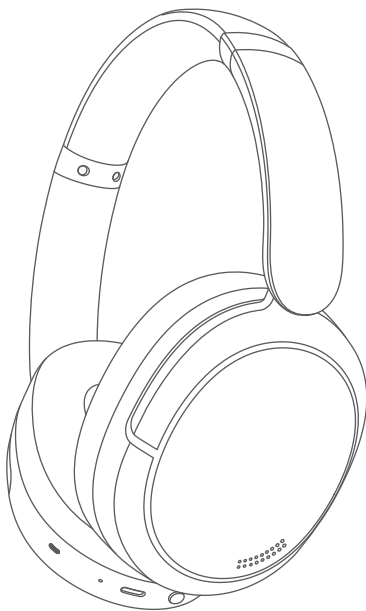

x1



x1

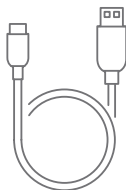

x1



x1


APPLICATION



Scan and Download
EDIFIER ConneX APP




POWER ON/OFF

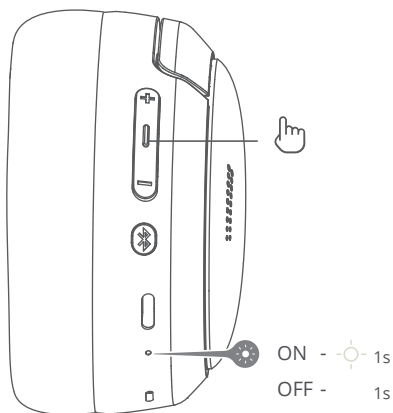

Press and hold the power button to turn the device on/off.




FIRST PAIRING

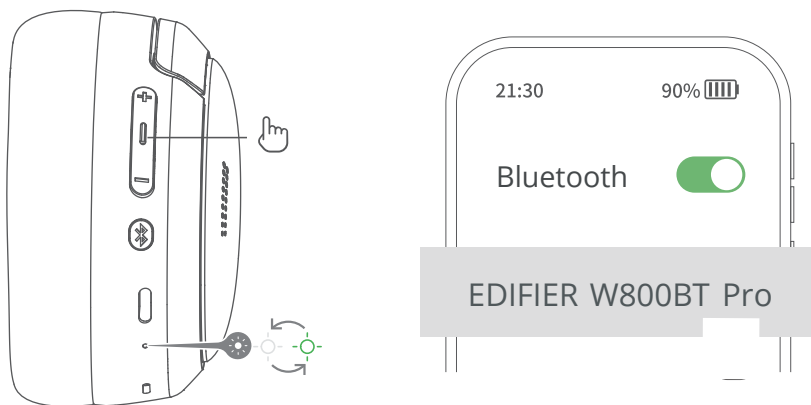

1. Once powered on, the headphones will automatically enter Bluetooth pairing mode. 2. On your device, select and connect to 'EDIFIER W800BT Pro'.



PAIRING A NEW DEVICE

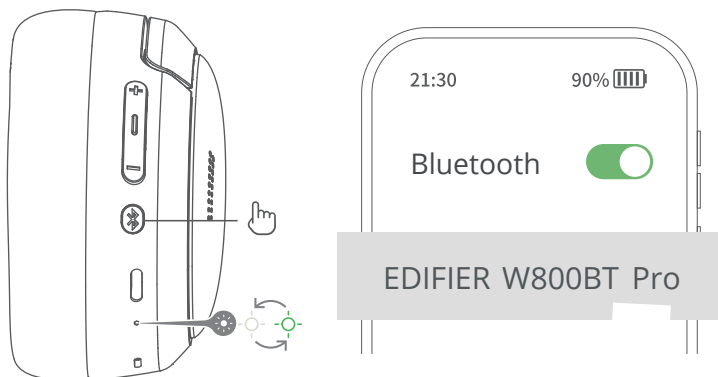


1. In the ON state, press and hold the ' ' button for about 3 seconds to enter Bluetooth pairing mode.
2. On your device, select and connect to 'EDIFIER W800BT Pro'.

Note: When used again, the headphones will automatically connect to the last used device.



CONNECTING TWO DEVICES

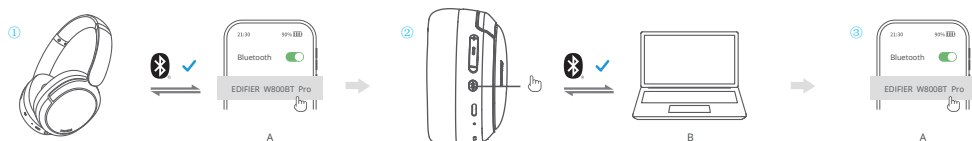

1. Successfully paired device A with the headphones.
2. Press and hold the ' ' button for 3 seconds to re-enter Bluetooth pairing mode, and then select the device 'EDIFIER W800BT Pro' in the settings of device B to connect.
3. Select "EDIFIER W800BT Pro" in device A settings to connect, and the connection of two devices will be established.

Note: When used later, the headphones will connect to the last used device.




CONTROL

● Calling



● Music

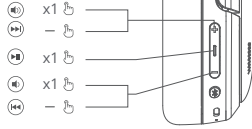


● Mode



1. "x 1" Press, "x 2" Double press, "—" Press and hold;
2. Default sound control: High noise reduction / Ambient sound / Noise reduction off.
3. More custom control options are available by downloading the EDIFIER ConneX app.




RESET

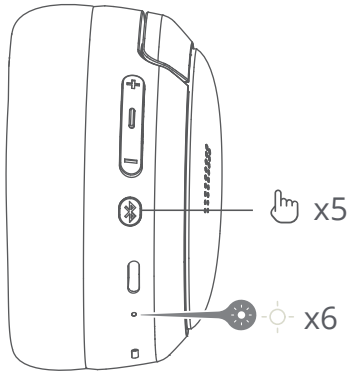

1. When powered on, press the button 'x5' times to complete the reset.
2. If successful, the headphones will automatically enter Bluetooth pairing mode.



CHARGING

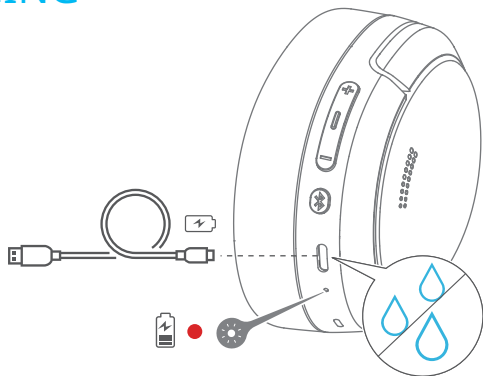

Input: 5 V 1 A=

Connect the headphones to a power source using a USB-C cable for charging. Note:

1. Before charging, ensure that the USB-C port is completely dry.
2. When charging via USB-C, the product operates as wired headphones, and Bluetooth functions are unavailable.



WIRED LISTENING



Connect to the headphones using a USB-C cable. Wired listening will automatically disable Bluetooth mode.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Edifier International Limited hereby declares that the type of radio equipment Wireless Headphones is compliant with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://files.innpro.pl/Edifier>

Manufacturer's address: P.O. Box 6264 General Post Office, Hong Kong

Radio frequency: 2400-2483.5 MHz

Maximum radio frequency power: ≤ 12 dBm (EIRP)

Precautions

1. Before charging, check if the device contacts are clean.
2. Never leave the device unattended while in use or charging.
3. Ensure that you can quickly disconnect the device from the power source in an emergency.
4. Never expose the device to high temperatures.
5. Charge the device in a dry and well-ventilated area away from flammable materials, maintaining a minimum distance of 1m from other objects.
6. Never cover the device while charging.
7. Never use a power supply, charging station, cables, etc. without recommendations and certification from the manufacturer.
8. Take care of your property; the device is equipped with batteries that are difficult to extinguish, so equip yourself with a fire blanket.

INNPRO Robert Błędowski sp. z o.o.
ul. Rudzka 65c
44-200 Rybnik, Poland
tel. +48 533 234 303
hurt@innpro.pl



Environmental protection



Used electronic equipment marked in accordance with the European Union directive must not be disposed of together with other municipal waste. It is subject to selective collection and recycling at designated points. By ensuring its proper disposal, you prevent potential negative consequences for the natural environment and human health. The system for collecting used equipment complies with locally applicable environmental regulations regarding waste disposal. Detailed information on this topic can be obtained from the municipal office, cleaning facility, or the store where the product was purchased.



The product meets the requirements of the so-called directives. New Approach of the European Union (EU), concerning issues related to user safety, health protection, and environmental protection, defining hazards that should be detected and eliminated.

This document is a translation of the original user manual created by the manufacturer.

The product should be regularly maintained (cleaned) by the user or through specialized service points at the user's cost and responsibility. In the absence of information regarding necessary periodic maintenance or service actions in the user manual, the user should regularly, at least once a week, assess the physical condition of the product against that of a physically new product. If any deviation is detected or identified, urgent maintenance (cleaning) or service actions should be taken. Failure to properly maintain (clean) and respond upon detecting a state of deviation may lead to permanent damage to the product. The warranty does not cover damages resulting from neglect.

Detailed information about the distributor's / manufacturer's warranty conditions is available on the website.
<https://serwis.innpro.pl/gwarancja>

LI-ION battery

The device is equipped with a LI ION (lithium-ion) battery, which, due to its physical and chemical structure, ages over time and with use. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal working conditions for the device exist, and the battery is new and fully charged. Actual battery life may vary from the declared specifications and this is not a defect of the device but a characteristic of the product. To maintain maximum battery life, it is not recommended to discharge it below 3.18V or 15% of total capacity. Lower values, such as 2.5V for the cell, can cause permanent damage and this is not covered by warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50% and its charge level should be checked periodically every two months. Store the battery and device in a dry place, away from sunlight and negative temperatures.

LIPO Battery

The device is equipped with a LI PO (lithium-polymer) battery, which, due to its physical and chemical structure, ages over time and with use. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where optimal working conditions for the device exist, and the battery is new and fully charged. Actual battery life may vary from the declared specifications and this is not a defect of the device but a characteristic of the product. To maintain maximum battery life, it is not recommended to discharge it below 3.5V or 5% of the total capacity. Lower values, such as 3.2V for the cell, permanently damage it and this is not covered by the warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50% and its charge level should be checked periodically every two months. Store the battery and device in a dry place, away from sunlight and negative temperatures.